⚠ WARNING

1. To avoid eletric shock, disconnect power at source prior to installation.
2. The installation should be performed by qualified electricians or lighting technicians.
3. Before conducting any installation, mainteance, or removal, disable all power to the luminaries and wait until the fixture cool down.
4. Do not touch the fixture while it is in service.
5. If there is any problem with the fixture, DO turn off power and DO NOT attempt repair unless you are a qualified technician or the customer service member.

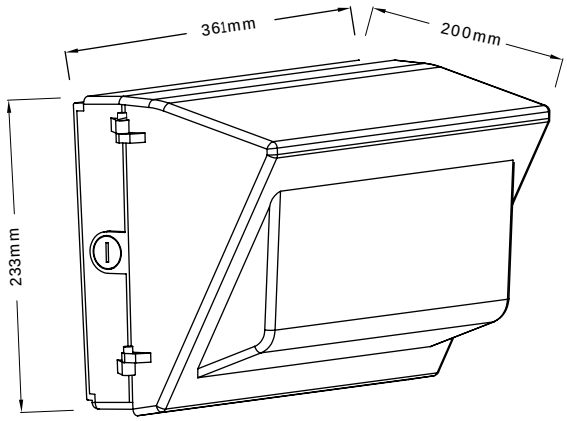

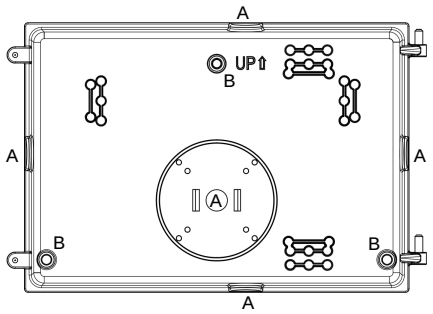

A - 20mm Dia. Threaded Hole
For Waterproof Gland (Included)
or Photocell Sensor (Optional)
B - 8mm Dia. Screw Hole for Installation

1. Loosen screws and open up the front section hinged on the left side.
2. Remove chosen 20mm knock out & fit with waterproof gland for mains feed.
3. Drilling out the holes(B) to secure it on the wall with choosing fixings & wallplugs if necessary. Use the supplied rubber gaskets for waterproof.
4. Wire mains feed as per diagram (take note of optional photocell).
5. Close the fitting and tighten the screws to lock it.

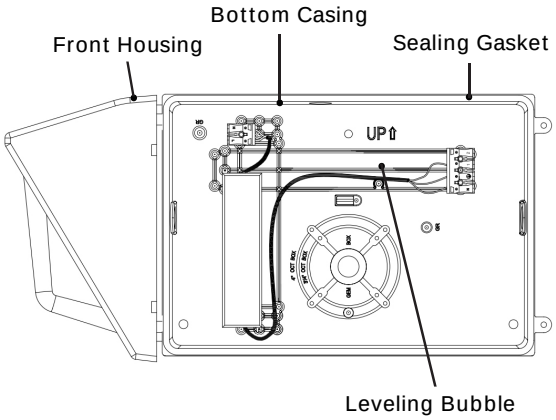

PHOTOCELL INSTALLATION

Universal voltage driver permits operation at 100 to 277VAC.
1. Install photocell and wire as per diagram.
NOTE: Use photocell rated for your supply voltage.

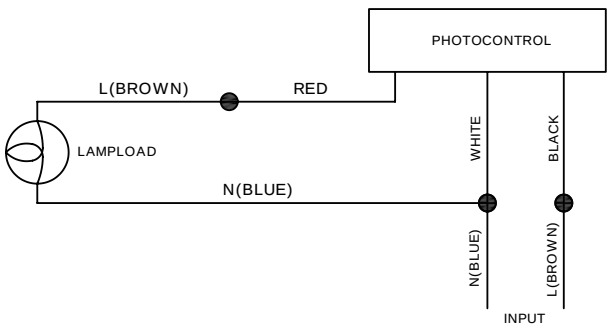

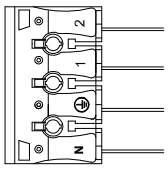

Reserved for Photoell Sensor
Live - Brown
Earth - YL/GN
Neutral - Blue

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?
3. Be sure the photocell, if used, is functioning properly.

Luminaire must be operated within an ambient fixture temperature of -20°C to 50°C to comply with all safety and warranty regulations. Ensure sufficient air flow around the for efficient heat dissipation. Failure to do so could significantly reduce luminaire life and/or safety/warranty regulations.

NOTE: Installation of LED luminaire with modification to the unit, or incorrect fitting in accordance with the above instructions could result in damage/failure of the luminaire, which may invalidate warranty.

MANUFACTURER'S GUARANTEE
This product is guaranteed in the country of purchase for the number of years as stated from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not in accordance with the advised instructions and/or national wiring regulations. Should this product fail during the guarantee period it will be replaced free of charge, subject to correct installation and return of the faulty unit. We not accept responsibility for any installation costs associated with the replacement of this product. This warranty is in addition to the statutory rights in your country of purchase and reserve the right to alter specifications without prior notice.